

# Web Server

# **INTELLIGENT MANAGEMENT**

# Hardware setting

 $1\,{\scriptstyle\scriptstyle\smallsetminus}\,$  Power on the device

2、Input "0" and press [OK] then input Initial Password "12345" press 【OK】 again to enter 【Main Menu】

3、Please select 【Comm. Setup】 option







## Login Web Server in LAN

- 4, Comm. : TCP/IP Server mode
  - IP Address: Device IP address
  - Mask: LAN Mask
  - Gateway: Local gateway
- 5、 In LAN open browser, input device IP address to visit device Web SERVER.
- 6、Input User ID and Password login the device.
- Super Administrator User: "0"

Password: 12345

lime Clo	ock Communication Setu	>
Real Time	Disable 🔻	
Comm.	TCP/IP Server 🔻	
IP Address	192.168.000.218	
Mask	251.155.255.000	
Gateway	192.168.000.001	
Server IP	192.168.000.007	
22-08-2011 02:37:15PM	Ν	I=Save and Exit
	Pir	AIM WEB SERVER
	B SERVER	IENT
16		
=		
USER		

## Login Web Server in WAN

7、 Comm. : TCP/IP Server mode

IP Address: Public IP address

Mask: Supply by ISP

Gateway: Supply by ISP

8、Open browser, input Public IP address or Domain to visit device Web SERVER.

Input User ID and Password login the device.

Super Administrator User: "0"

Password: 12345



# Login Web Server via NAT

 $9\,{\scriptstyle \smallsetminus}\,$  Comm. : TCP/IP  $\,$  Server mode  $\,$ 

IP Address: Private IP address

Mask: Local Mask

Gateway: Local Gateway

10、 Port address Translation, PAT put the oneport of the public IP address mapping to device's80 port

11、 Open browser, input Public IP address or Domain with port number to visit device Web SERVER.Input User ID and Password login the device.

Super Administrator User: "0"

Password: 12345





# Web Server Interface

### Administrator login interface:



# User login interface:

VNVIZ®	AIM WEB SERVER HIM (ANUIZ INTELLIGENT MANAGEMENT) Welcome! Log OL		
Terminal Log Out Status User Report			
Report Query Monitor	Status		
	Model	C3	
	Company Fingerprint	ANVIZ 2/3000	
	User Record	3/3000 10/10/50000	
	Firmware	03.23.9j	
			COPYRIGHT © ANVIZ BIOMETRIC CO., LTD

# Log Out

## Back to login interface:



# **Status**

Display device system information:



#### Status

Model	C3	
Serial	0000 0000 00	00 0000
Company	ANVIZ	
Fingerprint	2/3000	Registered fingerprint/fingerprint capacity
User	3/3000	Registered User/ User capacity
Record	10/10/50000	New Record/Existing Record/Record capacity
Firmware	03.23.9j	





# Monitor

### **Real-**Time Monitor

### Monitor

ID	Name	Date	Statu	Work Code
8002		2012-03-16 15:47:55	OUT	0
8001		2012-03-16 15:47:57	OUT	0

# User

### Management User information

#### Users



ID Number	1
Name	dengfeng
Privilege	User 💌
Password	
Card	0
Submit C	ancel
Submit C	ancel
Submit C Add User ID Number	ancel
Submit C Add User ID Number Name	ancel
Submit C Add User ID Number Name Privilege	ancel
Submit C Submit C Add User ID Number Name Privilege Password	ancel



Sleep Mode : Set whether to enable the sleep mode Sleep After : Set a regular sleep time Auto Update : Whether to automatically update Volume : Adjust sound size



# TCP/IP

# TCP/IP Setup

#### TCP / IP

Comm.	TCP/IP Server	Submit
ServerIP	192.168.0.7	Submit
IP Address	192.168.0.214	Submit
DNS	0.0.0.0	Submit
Gateway	192.168.0.1	Submit
MASK	255.255.255.0	Submit

Date/Time		
Open door & Rebo	ot	
Open Door		_
	Click Open the door	
Reboot		_
	Click Reboot the device	